



BSR0001

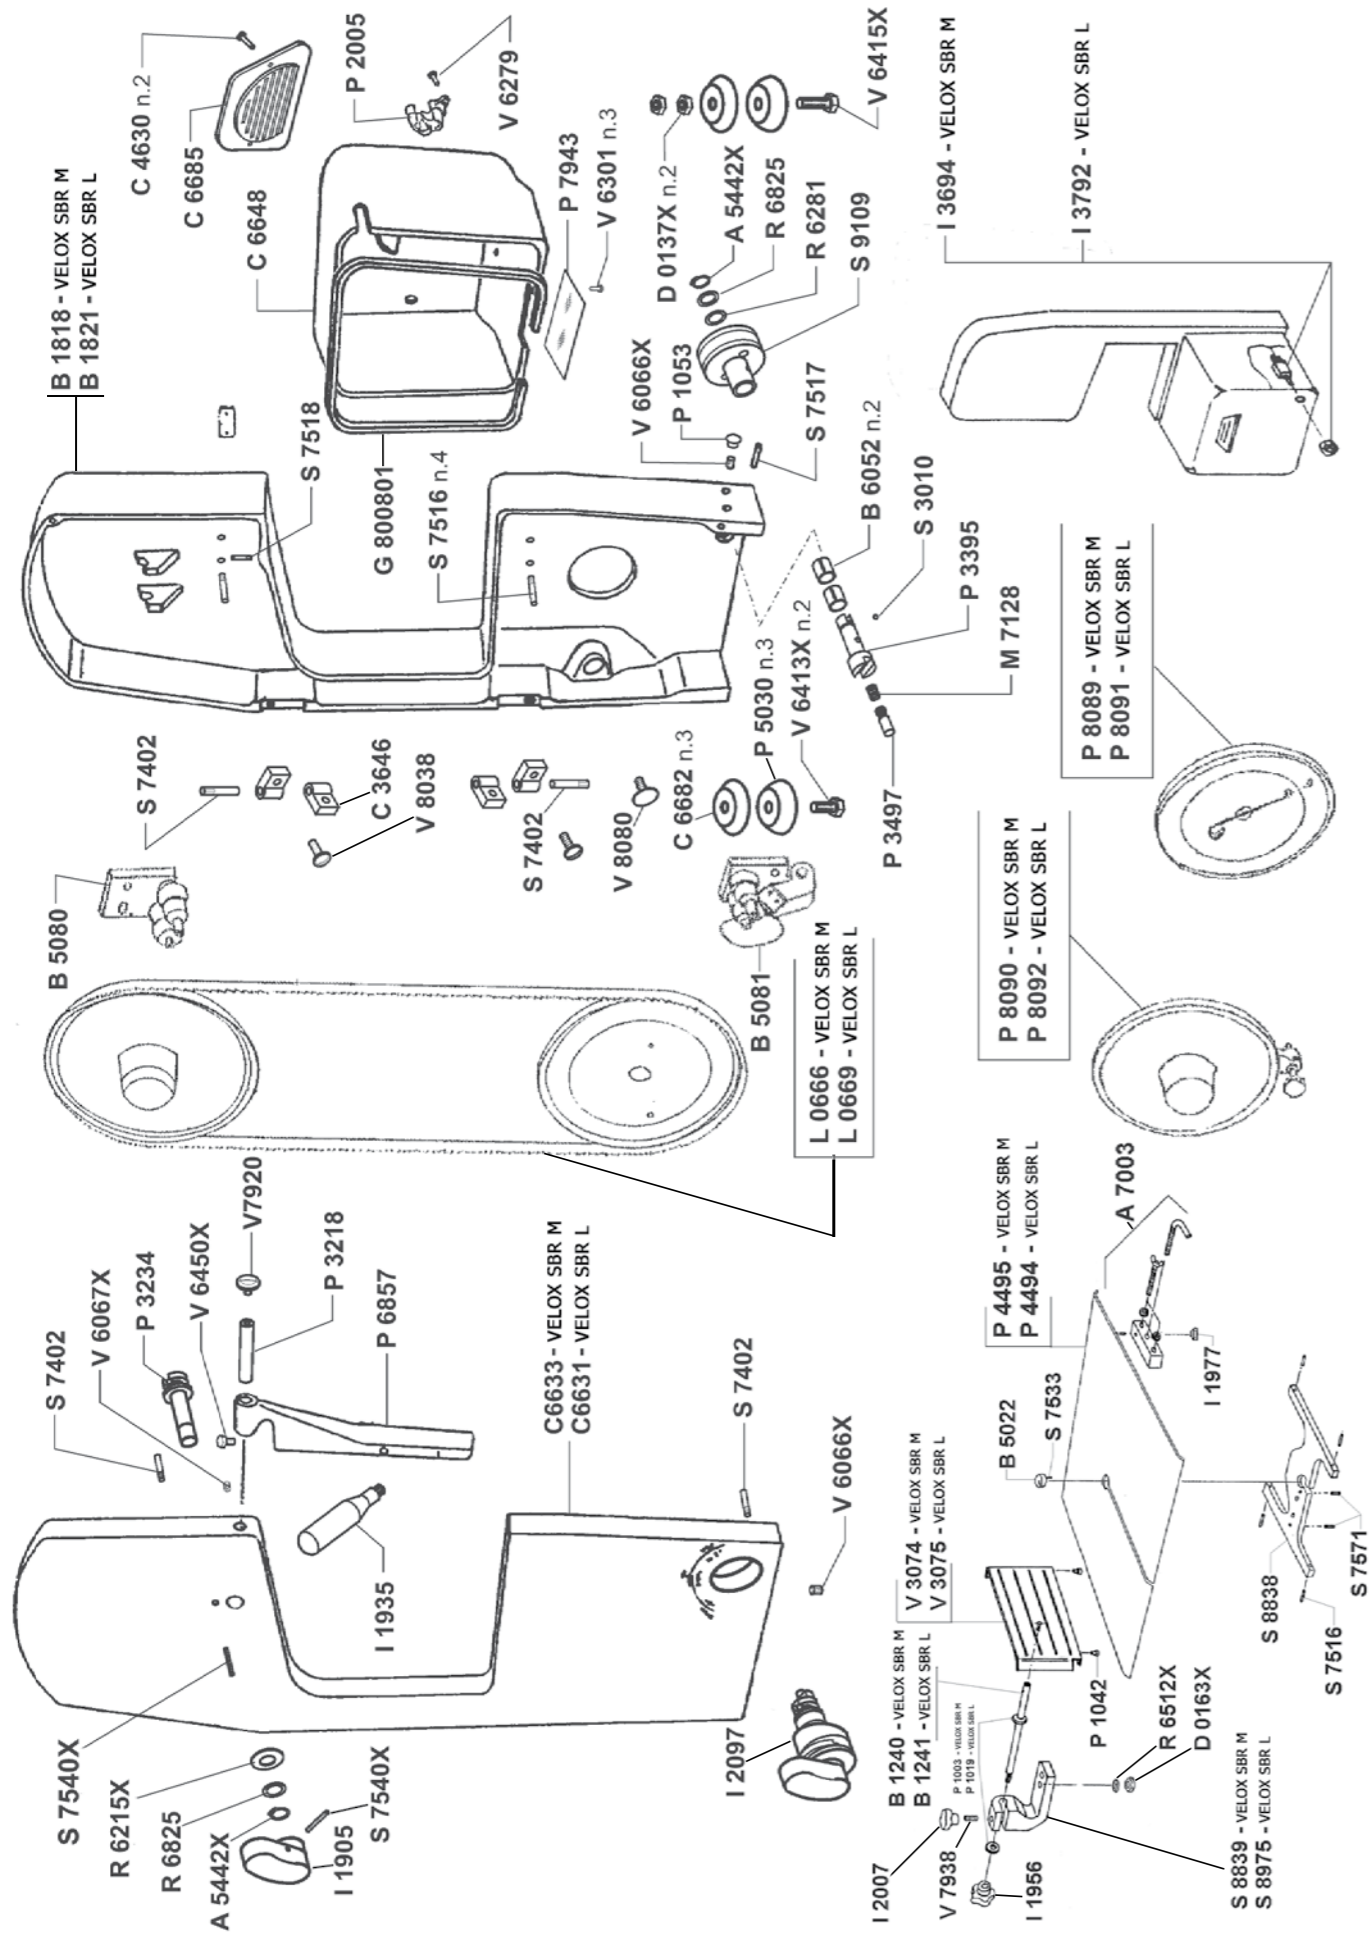

BSR0001

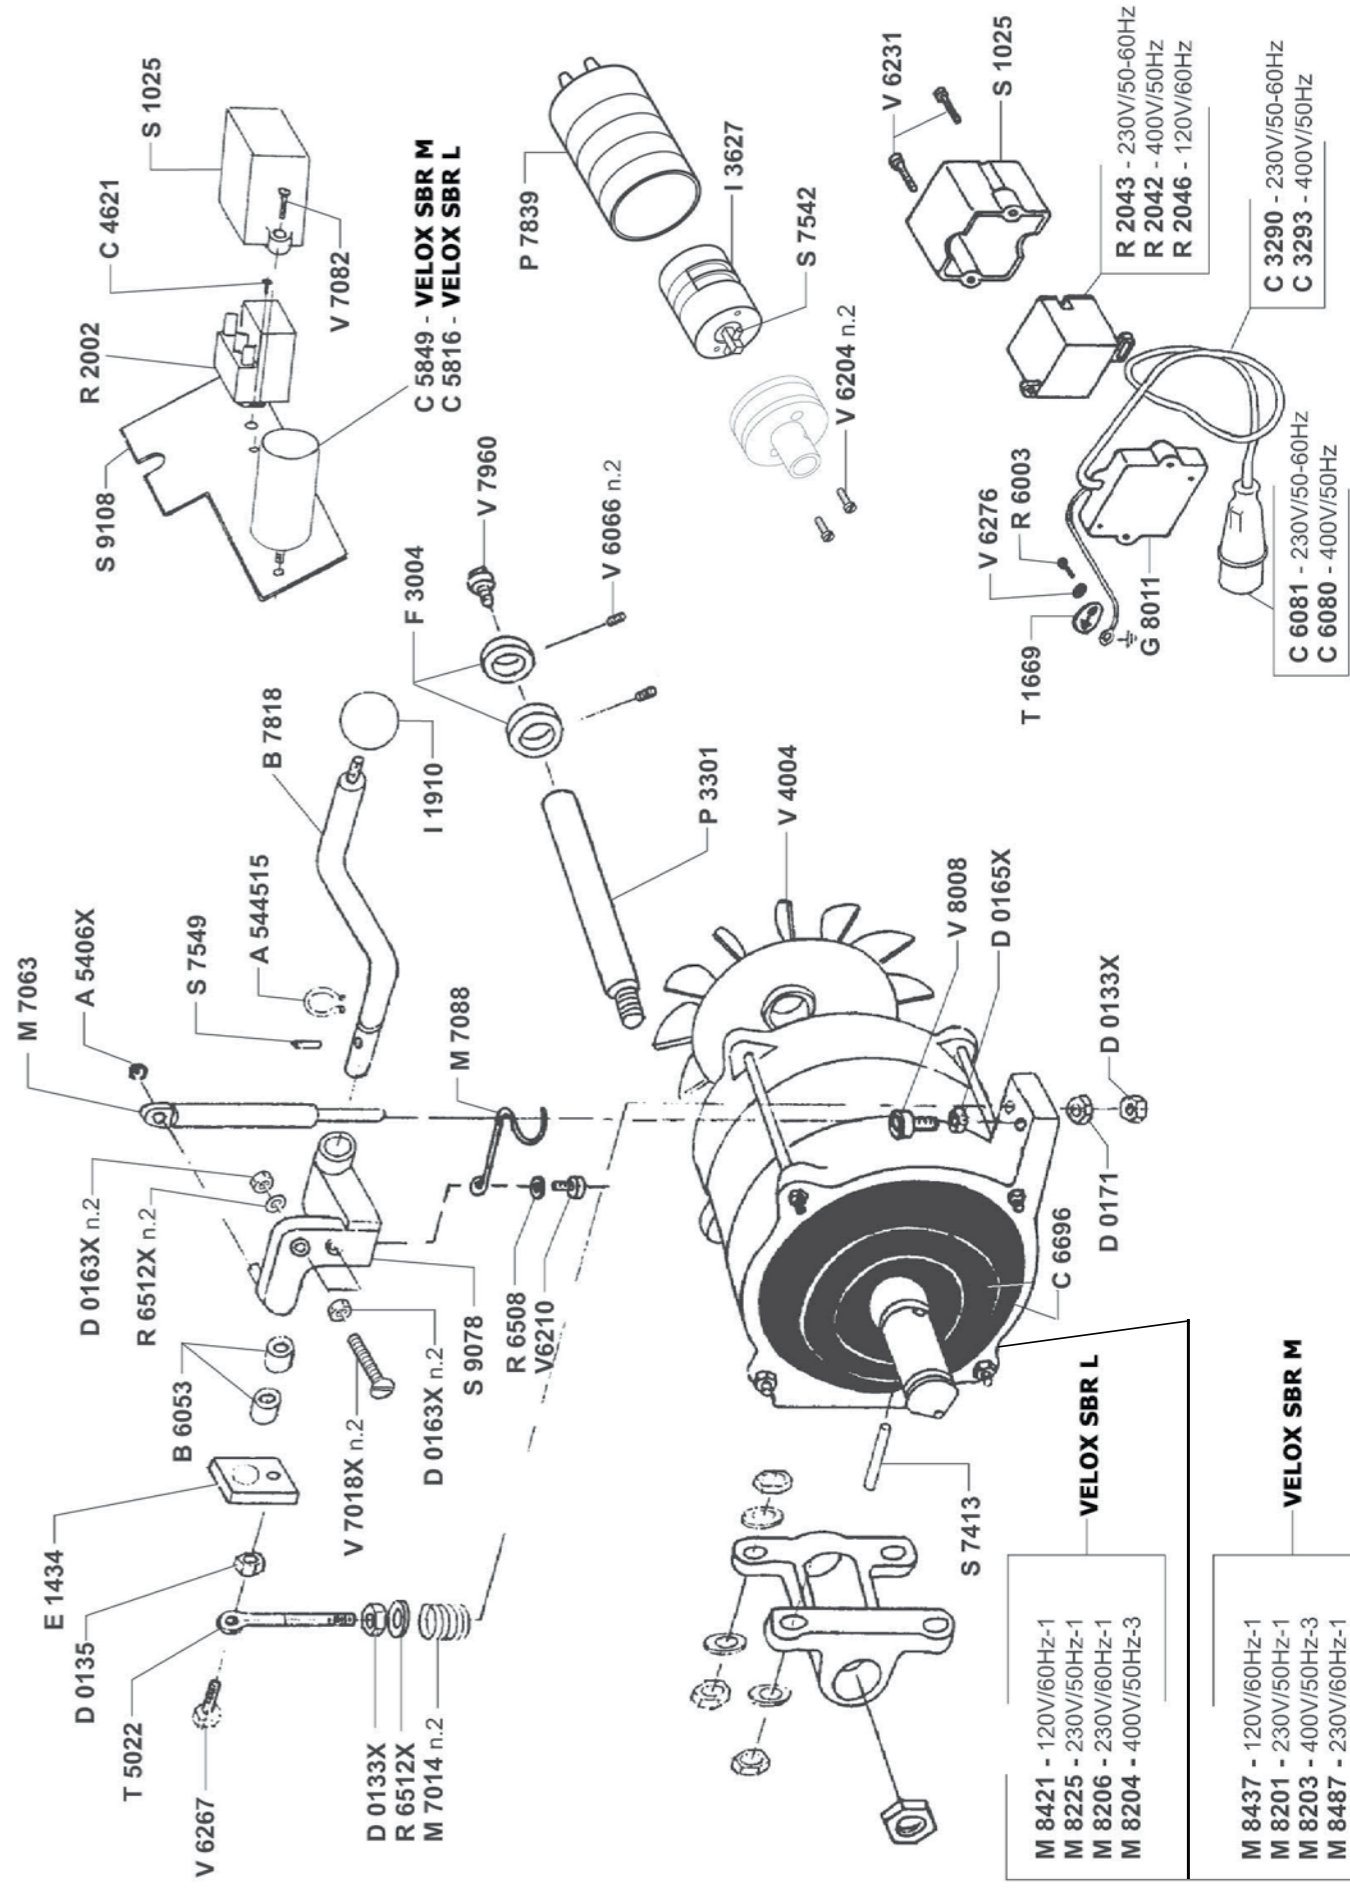

STOCK CODE	DESCRIPTION	MAN.PART NUMBER / DRAWING REF
XBSR3646	BANDSAW VELOX SBR-L - DOOR HINGE	C3646
XBSR5080	BANDSAW VELOX SBR-L - BLADE SCRAPER ASSY - UPPER	B5080
XBSR5081	BANDSAW VELOX SBR-L - BLADE SCRAPER ASSY - LOWER	B5081
XBSR5816	BANDSAW VELOX SBR-L - CAPACITOR 25MF 400V	C5816
XBSR5030	BANDSAW VELOX SBR-L - FOOT	P5030
XBSR0801	BANDSAW VELOX SBR-L - GASKET OF MOTOR COVER	G800801
XBSR8975	BANDSAW VELOX SBR-L - GAUGE - PLATE SUPPORT	S8975
XBSR2097	BANDSAW VELOX SBR-L - LOWER HANDLE ASS.	I2097
XBSR8091	BANDSAW VELOX SBR-L - LOWER PULLEY ASSY	P8091
XBSR6857	BANDSAW VELOX SBR-L - MEAT GRIP	P6857
XBSR6648	BANDSAW VELOX SBR-L - MOTOR COVER	C6648
XBSR8204	BANDSAW VELOX SBR-L - MOTOR EL 400V-50 THERMAL PROT	M8204
XBSR8225	BANDSAW VELOX SBR-L - MOTOR EL.230V-50 THERMAL PROT	M8225
XBSR3627	BANDSAW VELOX SBR-L - ON/OFF SWITCH	I3627
XBSR3395	BANDSAW VELOX SBR-L - PIN SWITCH	P3395
XBSR3301	BANDSAW VELOX SBR-L - PIN, MOTOR BRACKET	P3301
XBSR7003	BANDSAW VELOX SBR-L - PULLEY EXTRACTOR TOOL	A7003
XBSR2002	BANDSAW VELOX SBR-L - RELAY 11.8A 2CR4-208	R2002
XBSR2043	BANDSAW VELOX SBR-L - RELAY B6-30-10 220V	R2043
XBSR2042	BANDSAW VELOX SBR-L - RELAYB6-30-10 380V	R2042
XBSR0669	BANDSAW VELOX SBR-L - SAW BLADE	L0669
XBSR8038	BANDSAW VELOX SBR-L - SCREW M5X15	V8038
XBSR8080	BANDSAW VELOX SBR-L - SCREW M8X10	V8080
XBSR8011	BANDSAW VELOX SBR-L - SEAL	G8011
XBSR4004	BANDSAW VELOX SBR-L - SMALL FAN	V4004
XBSR9109	BANDSAW VELOX SBR-L - SWITCH SUPPORT	S9109
XBSR7839	BANDSAW VELOX SBR-L - THUMB SWITCH	P7839
XBSR4494	BANDSAW VELOX SBR-L - TRAY	P4494
XBSR8838	BANDSAW VELOX SBR-L - TRAY BRACKET	S8838
XBSR1905	BANDSAW VELOX SBR-L - UPPER DOOR HANDLE BAND SAW	I1905
XBSR8092	BANDSAW VELOX SBR-L - UPPER PULLEY ASSY	P8092
XBSR6685	BANDSAW VELOX SBR-L - VENT COVER	C6685