



**RHENINGHAUS**  
 Model: START 300  
 Revision: 01 Date: 02/2011

STOCK CODE	DESCRIPTION	MAN.PART NUMBER	DRAWING REF
XSLS1003	SLICER START [300]-CARRIAGE ASSY SPRING	8713	3
XSLM0059	SLICER MOND[ALL]-CARRIAGE ASSY WASHER	6307	5
XSLS2003	SLICER START [AUTO] - SPACING CAM	06009	10
XSLS1017	SLICER START [300]-ADJUSTING KNOB	6135	17
XSLM0080	SLICER MOND[ALL]-MEAT TRAY ROLLER	06515	30
XSLS1041	SLICER START [300]-MEAT REST HANDLE	IMPU440	41
XSLS9052	SLICER START - MOTOR RETAINING STUD	09552	43
XSLS1045	SLICER START [300]-MEAT PRESSER ROD	ASPI414	45
XSLS1051	SLICER START [300]-MOTOR	10067	51
XSLS2001	SLICER START [AUTO] - FLAT BELT	CM34516	56
XSLS0505	SLICER STEL - RETAINING RING	10505	62
XSLS4550	SLICERSTART [CHEESE] - TEFLON BLADE	8017	63
XSLS1078	SLICER START [300]-BLADE ROD KNOB	6005	78
XSLS1085	SLICER START [300]-SHARP ASSY BRACKET	SCAF410	85
XSLM0007	SLICER MOND[ALL]-SHARP ASSY MOUNT SHAFT	09083	90
XSLM0010	SLICER MOND[ALL] - SHARP ASSY BRACKET & GUIDE TUBE	0216	91
XSLM0075	SLICER MOND[ALL]-SHARPENER HOUSING KNOB	06014	108
XSLM0009	SLICER MOND/START/AUTO -SHARP ASSEMBLY COVER	00970	109
XSLM0038	SLICER MOND[ALL]-RUBBER FOOT	06102	115
XSLB0302	SLICER BETA - CAPACITOR	07403	130
XSLM0051	SLICER MOND[ALL]-MEAT TRAY BRACKET SCREW	09056	139
XSLS1175	SLICER START [300]-MICRO SWITCH	10116	168
XSLM9001	SLICER MOND[ALL]-COMPL SHARP ASSEMBLY NO COVER	0010	901
XSLS2002	SLICER START [AUTO] - BLADE PULLEY	0012	902
XSLM0005	SLICER MOND/START/AUTO -SHARP ASSY COVER & KNOB	0184	905
XSLS1046	SLICER START (300)-MEAT PRESSER	0054	907
XSLA0017	SLICER - SHARP STONES-ARG ,MON,START,BETA	08041/08044	097 + 102
XSLS1040	SLICER START[300]-MEAT TRAY BRACKET KNOB	6004	40
XSLS1077	SLICER START [300]-BLADE ROD	TIRPAR378	77